

# MCST Soft Start Transfer Switch Fire Pump Controller

**MASTER**

**Notes:**

- 1) Deluge Valve (maintained) contact(s) & Remote Start (momentary) contact(s) OPEN to start pump.
- 2) Lockout contact(s) CLOSE to lockout pump.
- 3) Power Failure Alarm (PAR) & Genset Start (GSR) contacts shown in Alarm or Starting State. All others shown Normal.

CONTROLLER SUITABLE FOR USE AS SERVICE EQUIPMENT

to Normal 3 Ø A.C. Source (SEQUENCE ABC)  
to Emergency 3 Ø A.C. Source (SEQUENCE ABC)

GROUNDING SERVICE CONDUCTOR  
GROUNDING ELECTRODE CONDUCTOR

