MCVS Variable Speed Fire Pump Controller

MASTER

Notes:
1) Deluge Valve (maintained) contact(s) & Remote Start (momentary) contact(s) OPEN to start pump.

2) Lockout contact(s) CLOSE to lockout pump.

3) Power Failure Alarm (PAR) contacts shown in Alarm State. All others shown Normal.

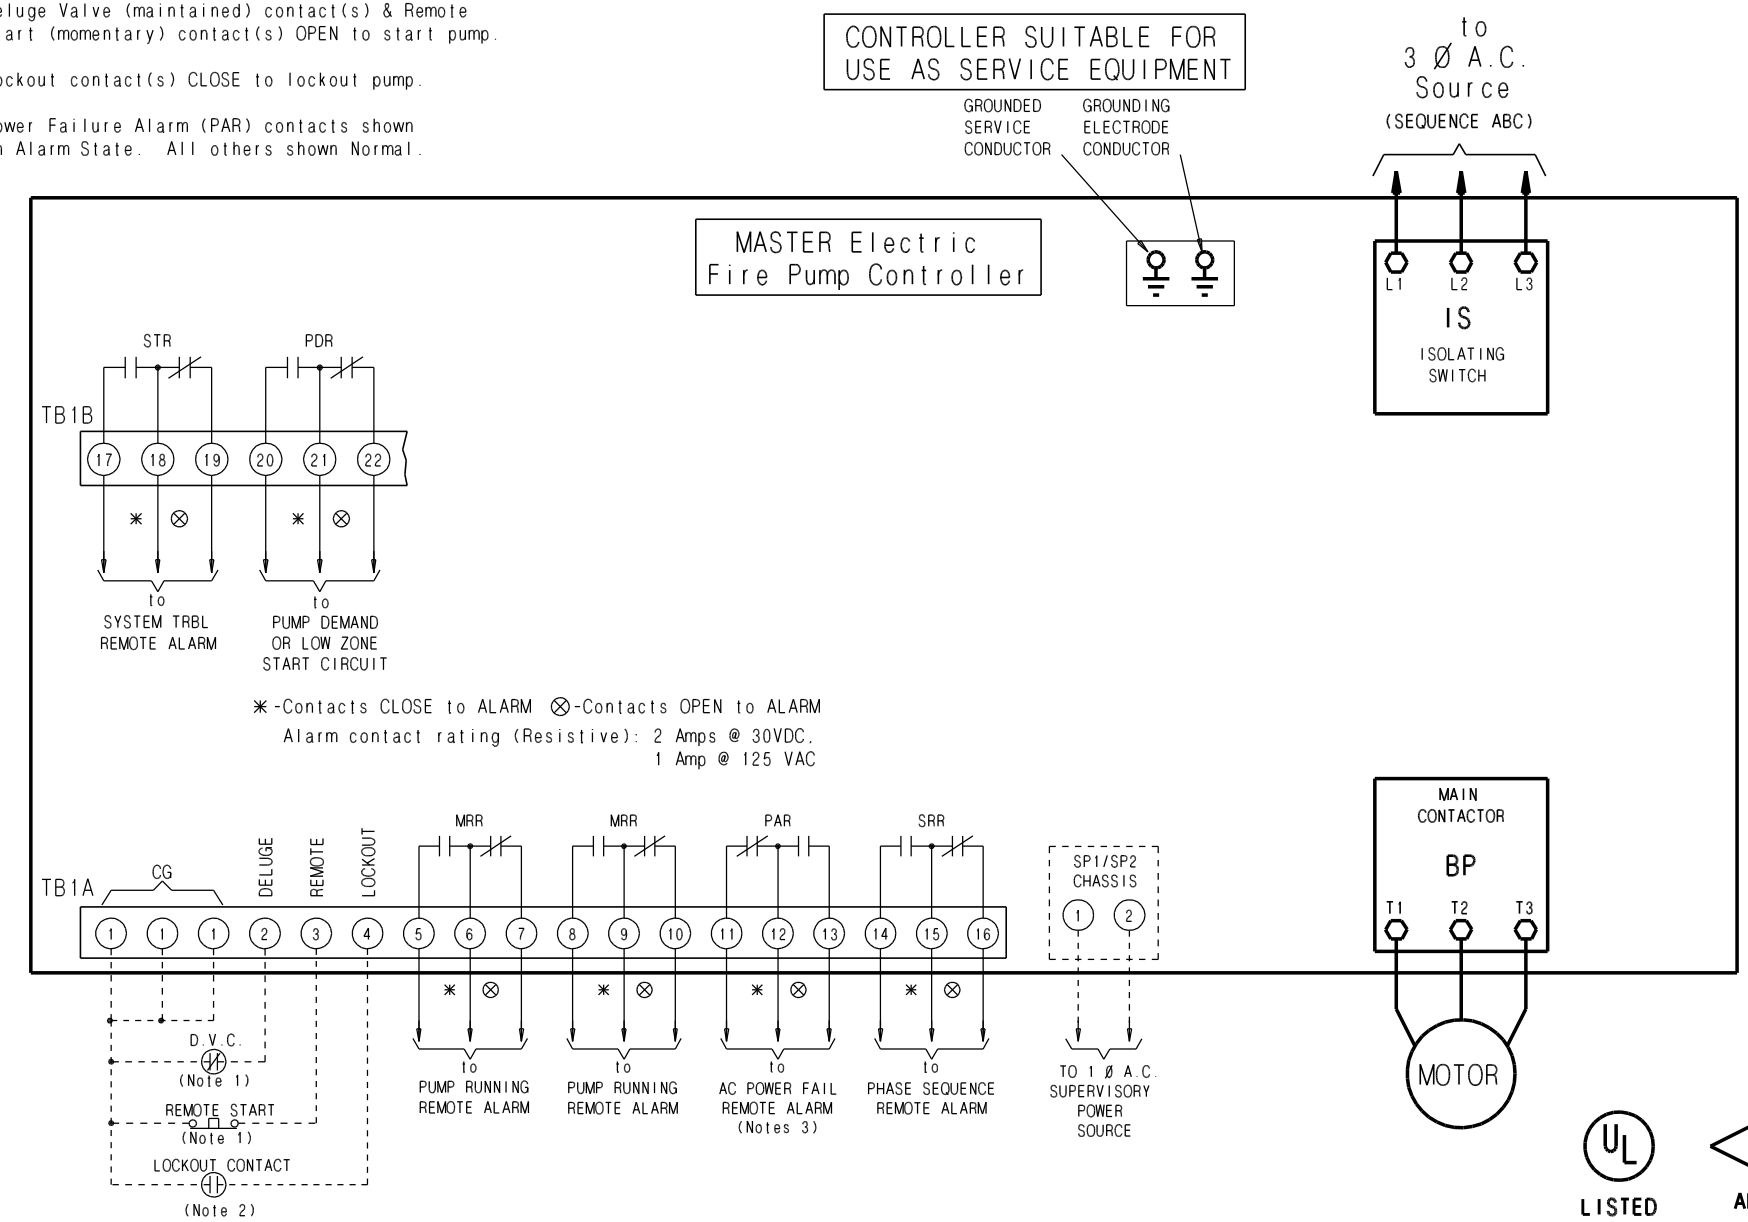

UL LISTED

FM APPROVED

Master Control Systems Inc. LAKE BLUFF, ILLINOIS U.S.A.	MODEL MCVS EXTERNAL WIRING DIAGRAM SOFT START BYPASS - G4	Date 10 Jan 2014 Drawing 20127 Issue 2